

Remote ON/OFF Control

The unit can be switched on and off by an external relay contact or open collector signal.


Contact rating

open: 15V leakage current max 100uA

close: 0.3V max drop at 15mA


Connector signal assignment for remote on/off

Normal operation

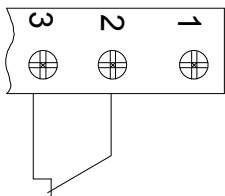

ON = open
OFF = closed

Reversed operation

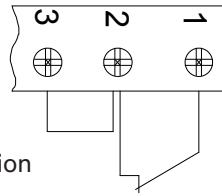

permanent bridge
for reversed operation

ON = closed
OFF = open

Equivalent internal interface circuit

