

## INSTALLATION INSTRUCTIONS

### TXL 350 Series Switching Power Supply

Order Code	AC-Input Voltage Range	Output Power max.	DC-Output	Recommended Circuit breaker
TXL 350-3.3S	85 – 264VAC 120 – 375VDC Universal Input	198 Watt	3.3V / 60.0A	10A (Characteristic C)
TXL 350-05S		275 Watt	5.0V / 55.0A	
TXL 350-7.5S		315 Watt	7.5V / 42.0A	
TXL 350-12S		350 Watt	12.0V / 29.2A	
TXL 350-15S		351Watt	15.0V / 23.4A	
TXL 350-24S		353 Watt	24.0V / 14.7A	
TXL 350-30S		354 Watt	30.0V / 11.8A	
TXL 350-36S		353 Watt	36.0V / 9.8A	
TXL 350-48S		360 Watt	48.0V / 7.5A	


Total output power must not exceed specified max output power.

Output 1 adjustable by potentiometer with a screwdriver.

Input current:	@ Vin=115VAC	@ Vin=230VAC	Power Consumption	@ Vin=115VAC	@ Vin=230VAC
➤ TXL 350	3.9A typ.	1.9A typ.	➤ TXL 350	435 Watt typ.	415 Watt typ.

Output Voltage Adjustment range: Only single output models	±10%
Operating temperature range: Natural Air Convection Cooling	-20°C – +70°C max. -4°F – +158°F max.
Output Power Derating:	above +50°C → 2.5%/K above 122°F → 2.5%/K Below V <sub>in</sub> = 100Vac → 1%/K
Storage temperature range: Non operating	-40°C – +85°C max. -40°F – +185°F max.
Connections:	Screw type terminal COMBICON. Recommended tightening torque 0.5 to 0.7Nm (4.5 to 6.2lb.in.)
Terminal for wiring:	Y or Ring shape recommended (max. diameter = 8.0mm)
Case material:	Aluminium base and cover
Mounting inserts:	4 x M3 and 10 x M4 4 different places 2 x M4 on one side and 4 x M4 on the other side 4 x M4 and 4 x M3 on the bottom.

Drawing:

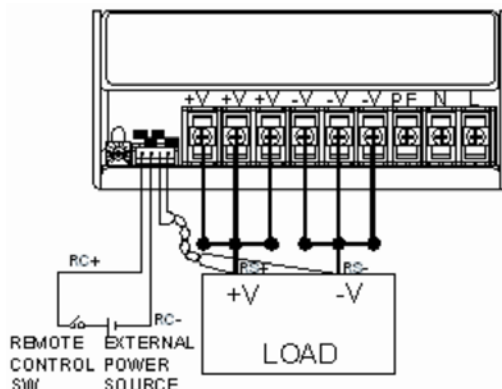

## **Safety Instructions:**

- Before installation read these instructions carefully and completely. This installation instruction cannot account for every possible condition of installation, operation or maintenance. Further information can be obtained from your local distributor's office or from the product data sheet, which can be downloaded, from the Internet at: [www.tracopower.com/products/txl.pdf](http://www.tracopower.com/products/txl.pdf).
- The power supplies are constructed in accordance with the safety requirements of IEC/EN60950-1, UL 60950-1 and CSA C22.2 No.60950-1. They fulfil the requirements for CE-compatibility and carries the CE mark. They are UL and cUL approved in accordance to UL60950-1 (recognised). The mains supply voltage connection, must be in accordance either with IEC 62103, EN 50178, IEC 60364 or VDE 100.
- Before any installation, maintenance or modification work ensure that the main switch is switched off and prevented from being switched on again. Non-observance, touching of any live components or improper handling of this power supply can result in death, severe personal injury or substantial property damage. Proper and safe operation is dependent on proper storage, handling, installation and operation.
- Compliance with the relevant national regulations (in the USA, Europe or other countries) must be ensured. Before operation is started the following conditions must be ensured:
  - ❖ Connection to mains supply in compliance with national regulations (VDE0100 and EN50178).
  - ❖ By use of stranded wires, all strands must be fastened in the terminal blocks. (Potential danger of contact with the case)
  - ❖ Input cables must be sufficiently fused.
  - ❖ Degree of protection I to IEC536. The non-fused protective earth connection must be connected to the PE terminal (Protection class I).
  - ❖ All output wires must be rated for the power supply output current and must be connected with the correct polarity.
  - ❖ Sufficient cooling must be ensured.
- **Never work on the power supply if power is supplied!** Risk of electric arcs and electrical shock, which can cause death, severe personal injury or substantial property damage.
- **Warning:** Hazardous voltages and components storing a very substantial amount of energy are present in this power supply during normal operating conditions. However, these are inaccessible. Improper handling may result in an electric shock or serious burns!

**Do not open the power supply until at least 5 minutes after it has been disconnected from the mains on all poles.**

  - ❖ Only trained personnel may open the power supply.
  - ❖ Do not introduce any objects into the power supply. The output voltage adjustment potentiometer may only be actuated using an insulated screwdriver.
  - ❖ Keep away from fire and water

## **Installation Instructions:**

- This power supply is designed for professional indoor systems. In operation the power supply must not be accessible. It may be installed and put into service by qualified personnel only.
- Do not operate without PE connection! To comply with EMC and safety standards (CE mark, approvals) the power supply must be operated only if PE terminal is connected to the non-fused earth conductor.
- The correct mounting position for optimal cooling performance must be observed. **Do not cover any ventilation holes.** Leave a free space of minimum 50mm (2in.) above and on the sides of the power supply. Observe power derating. (see our TXL data sheet)
- The internal fuse is not accessible, as it may not be replaced by the user. If this internal fuse has blown, the power supply has an internal defect and, for safety reasons, must be shipped to the local distributor. In case this internal fuse has to be replaced in the field, replace only with same type and rating of fuse for continued protection against risk of fire.
- **Recycling:** The unit contains elements that are suitable for recycling, and components that need special disposal. You are therefore requested to make sure that the power supply will be recycled environment friendly at the end of its service life.